

## Child Safety

In line with Child safety regulations, all boeboes<sup>®</sup> blinds are fitted with a child safety device. This is in the form of a circular wheel sitting in the head rail, designed to pop out and release itself when the chain is pulled with force. It's designed to easily be pushed back in once released and will immediately operate as before.




## Outside Recess:


1. Make sure your hands are clean!



2. Brackets are supplied. Take a look to see how they will push into the head rail, once they are fixed in position.

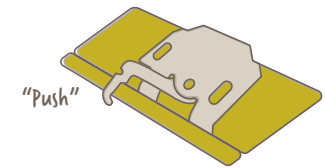


3. In order to hold the head rail comfortably whilst installing your blind, lower the blind by 10cm or so using the chain and peel off the fabric from the Velcro on the head rail.

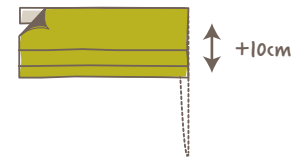

4. Hold your blind in position to see where it's going to be fitted. Make sure someone is holding the step if you need extra height.



5. Lower the blind and check the drop so that it's just where you want it to be - either just sitting on the windowsill or just below. The choice was yours when you measured for it.

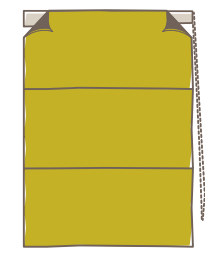


6. Make a mark with a pencil, where the brackets will need to be screwed into position. As a rule of thumb, we recommend you place your brackets 10cm of the way in from the left and right hand side of the window.




7. Using your drill and screws, attach the brackets to the wall. There are two options when fixing brackets to your surface. You can either screw into the ceiling (top fixing) or onto the wall or window frame (face fixing). If you are drilling into plasterboard, use the wall plugs.


Top Fixing Bracket

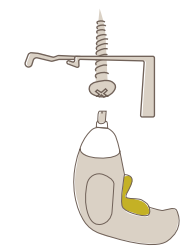


Face Fixing Bracket

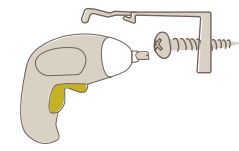



8. Push your blind into place and secure the brackets latch by sliding them firmly closed.

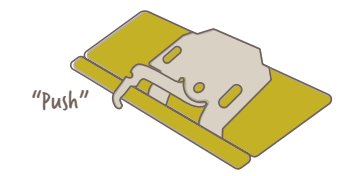


9. Push the blind fabric back onto the Velcro attached to the head rail.

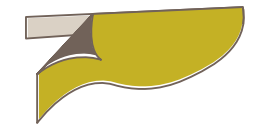

10. Use the chain pull to lower the blind and you're done! Stand back and admire your new blind!

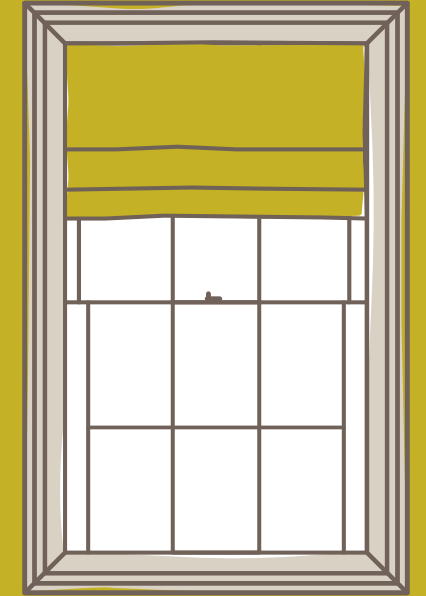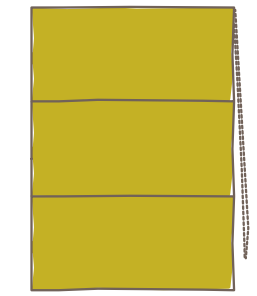

## Installation Guide

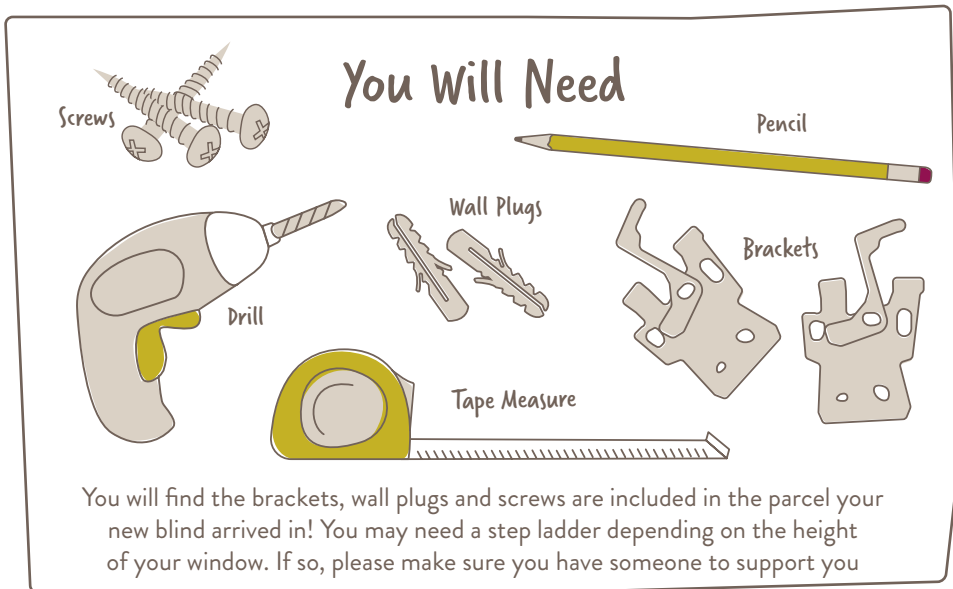

You will find the brackets, wall plugs and screws are included in the parcel your new blind arrived in! You may need a step ladder depending on the height of your window. If so, please make sure you have someone to support you


Putting up a roman blind has never been easier. Simply follow our illustrated guide to install yours.

### Inside Recess:


1. Make sure your hands are clean!




2. Brackets are supplied. Take a look to see how they will push into the head rail, once they are fixed in position.

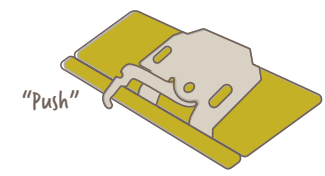


3. In order to hold the head rail comfortably whilst installing your blind, lower the blind by 10cm or so using the chain and peel off the fabric from the Velcro on the head rail.

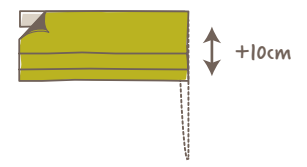


4. Hold your blind in position to see where it's going to be fitted. Make sure someone is holding the step if you need extra height.

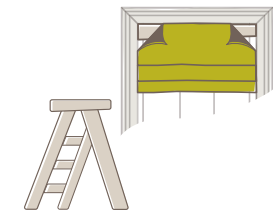

5. Position the blind forward enough so that it doesn't catch on any window catches or handles as it's lowered.

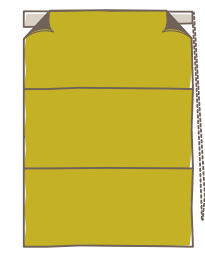


6. Make a mark with a pencil, where the brackets will need to be screwed into position. As a rule of thumb, we recommend you place your brackets 10cm of the way in from the left and right hand side of the window.

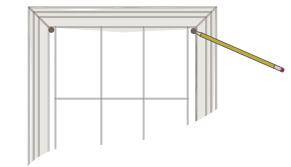


7. Using your drill and screws, attach the brackets to the window frame or soffit of the window recess. There are two options when fixing brackets to your surface. You can either screw into the soffit of the window recess (top fixing). Or, drill the screws into the window frame (face fixing). If you are drilling into plasterboard, use the wall plugs.


Top Fixing Bracket

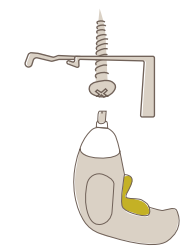


Face Fixing Bracket

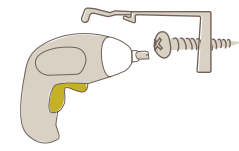

8. Push your blind into place and secure the brackets latch by sliding them firmly closed.

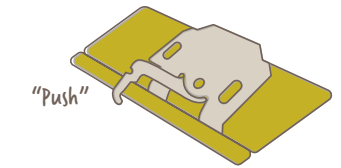

9. Push the blind fabric back onto the Velcro attached to the head rail.

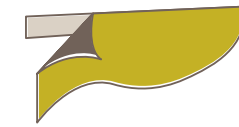

10. Use the chain pull to lower the blind and you're done! Stand back and admire your new blind!

